

Rocker switch override instructions

Actuator not moving up or down?

First check the fuse in the black fuse holder located at the black & red, 16 gauge wire harness which comes off the battery, fuse type is a ATC 20 amp.

If you suspect the actuator has failed and you have a "Tilt on the Fly" rocker switch, (not tilt through the joystick) you can simply bypass the rocker switch as follows:

Locate wire coming out of the side of the actuator, unplug from the current plug it is attached to. Plug lead from actuator into blue/yellow lead from the 14 pin connector which is located under the seat.

Now turn joystick on and press the "M" button, move the joystick forward or reverse and the actuator should move up or down.

If you find that the actuator does work, then the problem would be in the "Tilt on the Fly" rocker switch or wiring to it.

